無印良品

USBデスクファン
（低騒音ファン・首振りタイプ）

家庭用

取扱説明書

- お買い上げありがとうございました。
- ご使用の前に、この取扱説明書を必ずお読みのうえ正しくお使いください。
- この取扱説明書は必ず保管してください。

付属品
取扱説明書（本書）　1部

保証書付

取扱説明書番号　9ZF004−2（Y1411）

株式会社　良品計画
〒170−8424 東京都豊島区東池袋4−26−3
お客様室　0120−14−6404　平日10:00 ～ 21:00　土・日・祝 10:00～18:00
輸入元 リズム時計工業株式会社
〒330−9551　埼玉県さいたま市大宮区 北袋町 1 丁目 299 番 12
お客様相談室　0120−557−005　受付時間 9:00 ～ 17:00 土日、祝日、年始年末、夏季休日を除く

安全上のご注意　よくお読みのうえ、必ずお守りください。

図記号の説明
⃠は、禁止（してはいけないこと）を示しています。
❗は、指示する行為を必ず守ることを示しています。

⚠ 警告　死亡または重傷などを負う可能性が想定される内容

❗ 必ず守る　**故障や破損した状態で使わないでください。**

⃠ 禁止　次のような場所では使用しないでください
火災や感電などの原因になります。
- ストーブなどの暖房機器や火気の近く。
- 直射日光の強い所、炎天下の車内など高温になる所。
- 可燃性のシンナー、塗料など有機溶剤、ガスを使用している近く。
- 加湿器の近く。
- 風呂場、洗濯機の近く、台所などの水場や湿気の多い所。
- 小さなお子様が手の届く所。

⃠ 禁止　グリルを取り外して使わない
けがや故障、破損の原因になります。

■お手入れについて

- 汚れがひどいときは、水でうすめた中性洗剤や石けん水を、やわらかい布に少量つけてふき取り、その後、からぶきしてください。
  ※別項の「後ろグリルの取り外し / 取り付け」参照。
  ※水洗いをしないでください。
- ケースなどのよごれ落としに、ベンジン、シンナー、アルコール、スプレー式クリーナー類を使用しないでください。

保証書

製品名	USBデスクファン（低騒音ファン・首振りタイプ）
お買い上げ日	年　月　日
お客様 お名前	
お客様 ご住所	TEL

保証書貼付用レシート貼付欄

〔保証期間〕お買い上げ日より１年以内　日本国内のみ有効です。
This warranty is valid only in japan.

- レシートが未貼付の場合は無効です。
- ネットストアご購入の場合、お買い上げ日シール（店舗印）の同梱はございません。お買い上げ日は、ネットストアマイページ「注文履歴」にてご確認をお願い申し上げます。

■保証について

通常のお取り扱いで万一機械故障が生じました場合、保証期間中に下記までこの保証書を添えてお申し出下されば無償にて修理・調整いたします。

修理を依頼されるときは	持込修理

ただし、次の場合は保証期間内でも有償修理になりますのでご了承ください。
（ご使用の際はこの取扱説明書を必ずお読みください。）

1) 誤ったご使用による故障、またはお取扱いの不注意による故障
2) 不適当な修理や改造による故障
3) 寿命を過ぎたモーターの交換
4) 火災または天災による故障
5) ご使用中に生じる外観上の変化（本体の傷など）
6) 本保証書のご提示がない場合
7) 修理の際、外観の違う代替品を使用させていただくこともありますのでご了承ください。

- この保証書は本書に明示した期間、条件のもとにおいて無償修理をお約束するものです。この保証書によってお客様の法律上の権利を制限するものではありません。

⚠ 注意　傷害を負う可能性または物的損害が発生する可能性が想定される内容

⃠ 禁止　内部に指や異物を入れない
けがや故障、破損の原因になります。

⃠ 分解禁止　製品を分解、改造しない
けがや故障、破損の原因になります。

❗ 必ず守る　安定した所に置く
ぐらついた所に置くと転倒または落下して、けがや故障、破損の原因になります。

⃠ 禁止　布状のものをかぶせたり、ひも状のものを近づけない
けがや故障、破損の原因になります。

製品仕様

インターフェース	USB 2.0/3.0
電源	DC 5V、500mA 以上 USBポートより給電
風向き調節	左右自動首振り　約80度　上下（手動）　約30度
外形寸法	幅 11 × 奥行 10 × 高さ 16.5 ㎝
質量	385g
USB ケーブル長	約 1m
材質	ABS／PP樹脂

諸元値　（ ）内の数値は首振りを行ったとき

風量	電圧 V	消費電流 mA	消費電力 W	風量 ㎥/min	風速 m/min	騒音 dB
強	5	250（260）	1.25（1.30）	7	120	36
弱		190（200）	0.95（1.00）	5	90	26

＊風速は、ＪＩＳ Ｃ9601 に基づき５０㎝の位置での測定値。
＊騒音は、無響音室での測定値。
※USB 接続は給電のみを行い、パソコンとの通信は行いません。
※製品仕様は、改良のため予告なく変更することがあります。

■ 各部の名称と役割

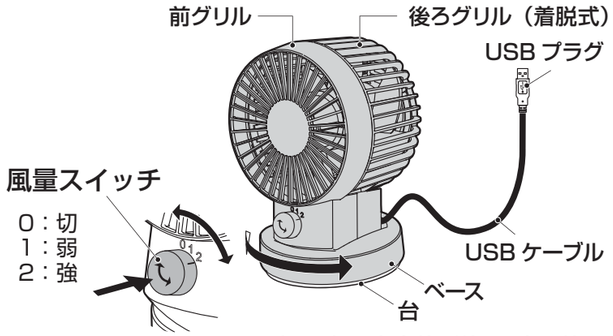

風量スイッチを押すと首振りのONとOFFが切り替わります。

首振り:台の上全体が約80度の範囲で動きます。水平な所に置いてご使用ください。また、USBケーブルにゆとりがないと正常に首振りしません。

⚠ 注意　❗ 必ず守る

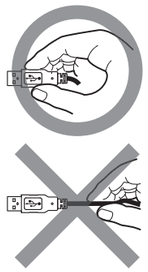

- ○お手入れの際や使用しないときは、USBプラグを必ずUSBポートから取り外してください。
- ○ケーブルを引っ張ると断線するおそれがあります。必ずプラグ部分を持って着脱してください。
- ○手や足にUSBケーブルを引っ掛けないよう、配線に注意してください。
- ○振り回したり、落としたり、強い力を加えないでください。

■ 上下風向き調節

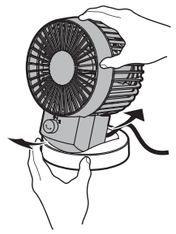

ベースを押さえて、前グリルを前後することにより、上下方向の角度を約30度の範囲で調節することができます。
※スイッチを「0」（切）にして操作してください。

■ 後ろグリルの取り外し / 取り付け

ほこりなどを取り除くときに、後ろグリルを取り外すことができます。

取り外す

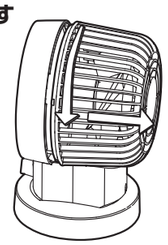

USBプラグをポートから抜き、矢印方向に回転させてから後ろへ引く。

取り付ける

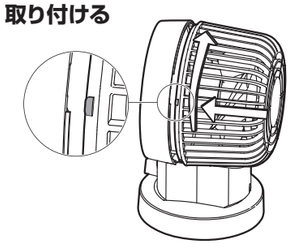

取り付けるときは、凹凸を合わせてから回転させる。

⚠ 注意　❗ 必ず守る

※性能上、羽根には鋭角な所があります。けがを防ぐために手袋を着用して作業をしてください。
※USBプラグをパソコン等から取り外して操作してください。
※羽根を回転させるときは、必ずグリルを取り付けてください。

ご使用の手順

1. USBケーブルを接続

①スイッチを「0」（切）にします。
②USBプラグをパソコンのUSBポートへ接続します。
　USBプラグの向きに注意して挿し込んでください。
　無理に挿し込むと破損や故障の原因になります。
※パソコンに電源が入っていないと、USBポートから電力が供給されません。一部のパソコンでは、供給するものがあります。
※家庭用コンセントからUSB電源に変換できるUSB電源アダプター（定格出力電圧5V、電流500mA以上）をご利用いただけます。

⚠ 警告　❗ 必ず守る　**定格のUSB電源以外に接続しない**
火災や発熱、故障の原因になります。

2. スイッチで「1」（弱）または「2」（強）を選択

こんなときは

▶羽根が回らないとき

①USBケーブルがしっかり接続されているか確認してください。
②パソコンの電源が入っているか確認してください。
③USBポートを利用して、携帯電話などへ充電をしていませんか? 消費電流の高いものを同時に使うことはできません。
④モーターが寿命に達した可能性があります。

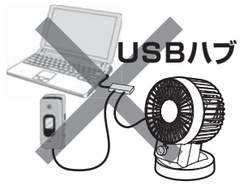

▶首振りが止まる、動きが滑らかでないとき

○USB ケーブルに“ゆとり”を作ってください。

良い例

ケーブルに“ゆとり”がある。

悪い例

ケーブルが延びきっている。　**ケーブルにものが載っている。**

○ファン本体の周囲に空間をあけてください。
　ファン全体が首振りしますので、ファン本体にものが触れると正常に首振りが行えません。
○USBケーブルは低温になると硬くなり、首振りがしにくくなります。10℃以上の所でお使いください。
　およそ10℃で硬くなり始め、低温になるほど硬くなります。

ご使用上のご注意

1.USB給電の外付けハードディスクや携帯電話への充電などと同時に接続すると、パソコンに障害を与えることがあります。
USB2.0 定格出力規格では、電圧 5V　電流500mA です。
このファンは、USBポートに直接接続してください。
本製品を使用することによって生じたいかなる支出、損益、その他の損失に対してなんら責任を負いかねますので、ご了承ください。

2.長くお使いいただくには、
①使用しないときには、こまめにスイッチを「0」（切）にする。
②パソコンなどの空冷用に使用しない。

3.テレビやラジオなどのそばで使用した場合、音声などにノイズが入る場合があります。
テレビやラジオから離してお使いください。

MUJI
無印良品

USB Desk fan (low noise, swing type)

Home Use

User Guide

- Thank you for purchasing this product.
- Please read this document before using the fan and use the fan correctly.
- Please keep this sheet in a safe place for future reference.

Included
User Guide (this sheet) 1

User Guide Number 9ZF004-2 (Y1411)

Product specifications

Interface:	USB 2.0/3.0
Electric power supply:	DC5V (fixed) 500mA or above (supplied from USB port)
Wind direction adjustment	Automatic left/right oscillation: Approx. 80° Up/down (manual): Approx. 30°
External dimensions (approximate):	11cm Wide x 10cm Deep x 16.5cm High (4.3in Wide x 3.9in Deep x 6.5in High)
Weight (approximate):	385g/ 0.85lb
Length of USB cable (approximate):	1m/ 39.4in
Material:	ABS / PP resin

Specification table — Numbers in brackets are for when oscillating.

Switch positions	Voltage V	Consumption current mA	Power consumption W	Air volume m^3/min	Wind speed m/min	Noise dB
High	5	250 (260)	1.25 (1.30)	7	120	36
Low		190 (200)	0.95 (1.00)	5	90	26

* Wind speed measured according to JIS (Japanese Industrial Standards) C9601 at a distance of 50cm.
* Noise measured in a soundproof room
* USB is to be used only for supplying power to the device and not for communicating with a computer.
* For the sake of improvement, product specifications are subject to change with no advance notice.

Safety Advice

Please read carefully and follow the instructions below.

Description of symbols

⃠ indicates that an action is prohibited.

❗ indicates that the directions must be followed.

Before first use

1. Remove all packaging materials.
2. Check for completeness and shipping damage immediately after unpacking. If your shipment is damaged or incomplete, please contact your dealer.
3. Dispose of the packaging materials in an appropriate way.
4. Packaging materials are not toys. Always keep all packaging materials away from children.

⚠ Warning This symbol indicates the danger of death or serious injury.

❗ **Do not use if damaged or broken.**

⃠ **Do not use in the following places.**
May cause a fire or electric shock.

- Near heating appliances such as stoves or open flames.
- In strong direct sunlight where temperatures may soar, for example, inside a car standing in the sun.
- Near any location where organic solvent (thinner, paint, etc.) or gas is being used.
- Near a humidifier.
- In bathrooms, near a washing machine, kitchens or near any other wet or damp places.
- Within the reach of small children.

⃠ **Do not use without the fan guard.**
There is a risk of serious injury or death.

■ Proper care and maintenance

- **When the appliance is badly soiled, use a soft cloth with a small amount of mild detergent to clean it. Then rub it dry with a dry cloth.**
  * **See the section entitled "Removing and reattaching the rear fan guard."**
  * **Do not immense the electric parts of the appliance in water or other liquids. Do not hold the appliance under running water.**
- **Do not use benzene, paint thinner, alcohol, or any kind of spray cleaner to treat soiled areas on the case or other parts.**

⚠ Caution This symbol indicates the possibilities of injury or material damage.

⃠ **Do not insert fingers or other objects in the fan guard.**
There is a danger of personal injury or damage or breakage.

⃠ **Do not disassemble or modify the product.**
There is danger of personal injury or damage or to the product or breaking it.

❗ **Place on a stable surface.**
If placed on an uneven surface, the fan may fall over or fall from the furniture, resulting in personal injury or damage to the product or breaking it.

⃠ **Do not cover with woven materials on the fan and keep away from strings and cords.**
There is danger of personal injury or damage or to the product or breaking it.

CE This product complies with the EMC requirements of the European Community.

The symbol on the product, packaging, and/or accompanying document indicates that this product should not be disposed with normal household waste. This product shall be taken to the applicable collection point for recycling. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health. For more information about recycling of this product, please contact the shop where you purchased the product, or your local authority.

This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste.
Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps to prevent potentially negative consequences for the environment and human health.

■ Parts: names and functions

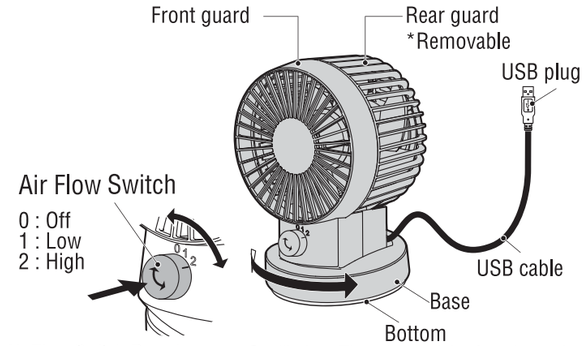

Air Flow Switch Pressing this will start and stop the oscillation.

Oscillation: The whole of the fan above the bottom will move in a range of 80°. Please place on a horizontal surface. Also, if the USB cable does not have enough slack, it will not oscillate correctly.

⚠ Caution ❗

- When cleaning the product or when it is not in use, be sure to remove the USB plug from the USB port.
- When plugging or unplugging the USB cable, make sure to hold it by the plug.
- Be careful when placing the USB cable to avoid a tripping hazard.
- Do not spin the device around, drop it, or apply strong force to it.

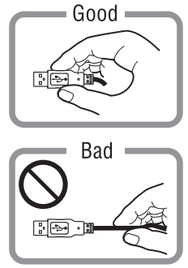

■ Angular adjustment

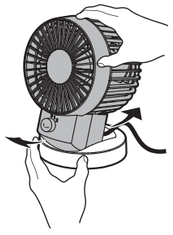

You can adjust the up and down angle of the fan within a range of about 30° by holding down the base and moving the front fan guard forward or back.
* Have the switch set at "0" (Off) before adjusting it.

■ Removing and attaching the rear fan guard

You can remove the fan guard on the back in order to dust the fan.

Removing

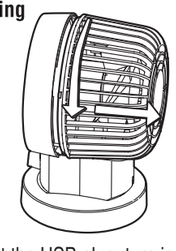

Disconnect the USB plug, turn in the direction shown by the arrow, then pull back to remove.

Attaching

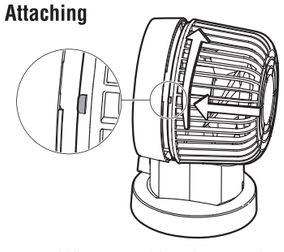

When attaching the guard, match up the notches and tabs and then twist.

⚠ Caution ❗

* There are sharp edges on certain areas of the blades, due to their function. To avoid injuries, please wear gloves when handling them.
* Unplug the USB cable from the computer before servicing the fan.
* Be sure to attach the fan guard before turning the fan on.

Usage Guide

1. Connect USB cable.

(1) Set switch at "0" (Off).
(2) Insert the USB plug into the USB port of computer.
When plugging in, pay attention to the position of the plug. Forcing it in may damage or break it.
* No electric power will be transferred from the USB port if the computer is not switched on. Some computers provide electric power even when turned off.
* You can also use an AC adapter that transforms an ordinary household electrical outlet into a USB power source. Use an outlet with a rated power voltage of 5V and an electric current of at least 500mA.

⚠ Caution ❗ Do not connect to non-rated USB power sources. Failure to comply may cause fire, overheating or malfunction.

2. Set the switch to either "1" (Low) or "2" (High).

Troubleshooting

▶If the blades fail to rotate

(1) Check to make sure that the USB cable is plugged in securely.
(2) Check if the power of the computer is on.
(3) Is it possible that you are engaged in charging a cell phone from a USB port?
You cannot use more than one item at the same time when a large consumption current is required.
(4) The motor may have reached the end of its lifetime.

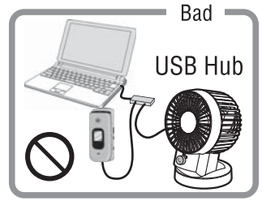

▶If oscillation stops, or movement is not smooth

○ Give the USB cable some slack.

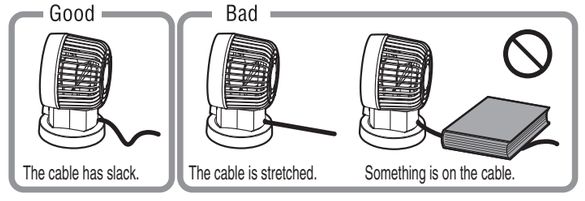

○ Leave some space around the fan.
The whole fan oscillates, so if any objects are in contact with the fan, it will not be able to oscillate correctly.

○ The USB cable becomes stiff at low temperatures and it may not oscillate correctly. Use at temperatures of 10°C or higher. It begins to stiffen at 10°C, and the lower the temperature, the more it stiffens.

Cautions for use

1. **Connecting the fan to a computer while it is supplying power to an external hard disk through a USB port or charging a cell phone or other product at the same time may damage the computer.**
With UBS2.0 standard rated output, voltage 5V, electric current 500mA.
This fan should be connected directly to a USB port.
We will not be responsible for any expense, financial loss, or other losses that may result from the use of this product.
2. **To prolong the life of your fan**
(1) When not using it, be sure that the switch is set at "0" (Off).
(2) Do not use it to cool down a computer.
3. **The fan may cause unwanted noise when used next to a television set or radio.**
Please use it at a suitable distance from televisions and radios.